


Quick Start Guide

iMOVE 3pro

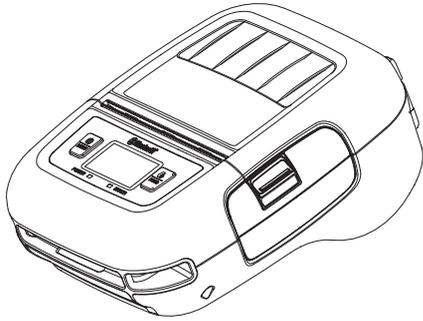

 
Packing List



Printer




USB Cable



AC Adapter



 Battery



Roll Paper



Belt Clip



Quick Start Guide




CD

⚠ NOTE:


- ◆The AC adapter vary by local or region.
- ◆The packing materials are actually based on the order.

Appearance and Components


Front

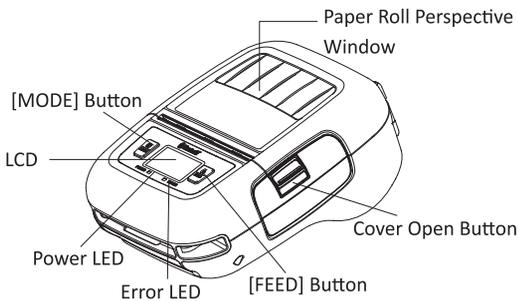

Back

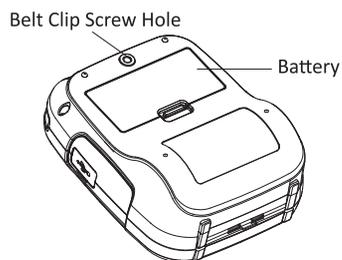


Inside

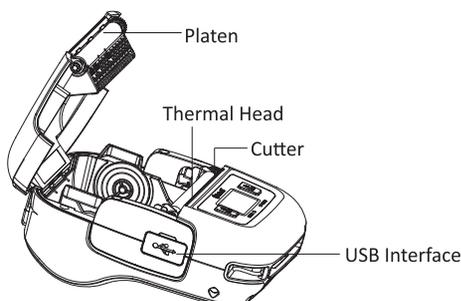


Paper Loading


1. Press the cover open button to open the printer cover.

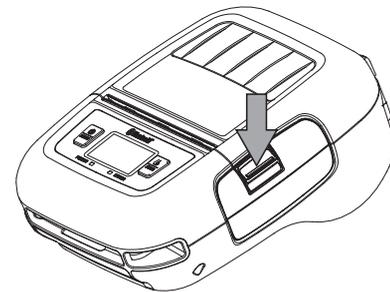


2. Load the roll paper in the orientation shown in the figure below.

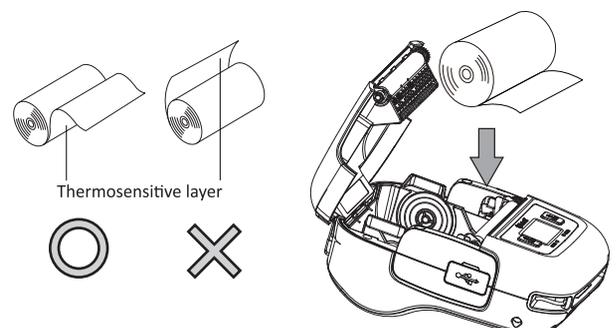

3. Pull the end of the roll straight toward you. Then press down on both sides of the printer cover to close it firmly. When you close the printer cover, make sure that it is closed on both sides.

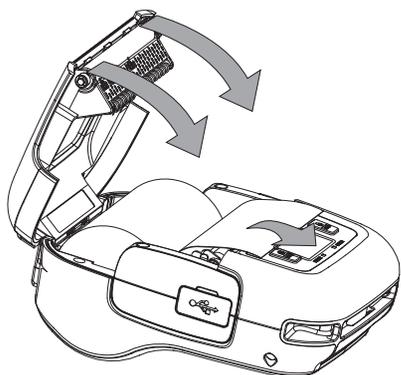

4. Use the tear bar to cut the extra paper.

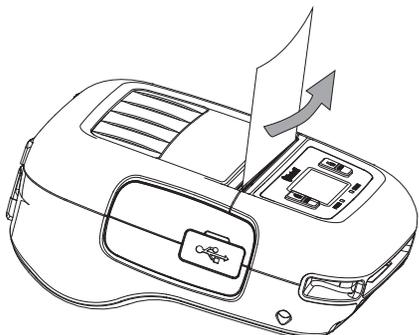


Battery Charging

Plug in socket with USB charging.

When battery pack runs out of power, the battery icon will flash. It powers off automatically when continues printing.

If you want to go on, please charge it.

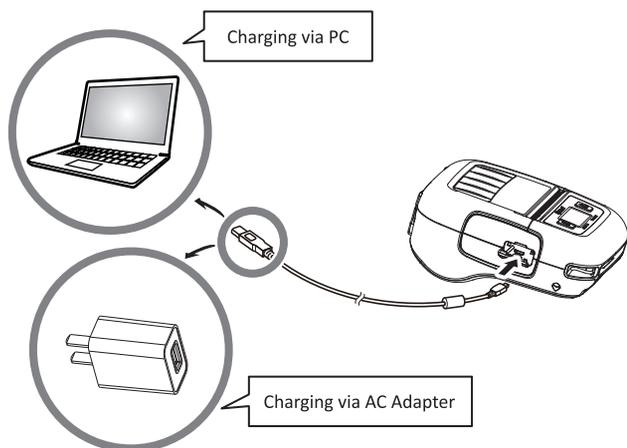

⚠ Note


- ◆ POWER lamp will always flash in green color and goes off when fully charged.
- ◆ Charging the printer when it is on, even if battery icon on the LCD shows fully charged, turn off the printer and let the battery charge until the POWER lamp goes off for fully charge.

Battery Installation


1. Make sure that the printer has been turned off before you insert or remove the battery pack.

2. Insert the battery pack into the back of the printer as in the figure shown below, following the direction of the arrow.

Press down on the battery pack until the hook click into place.

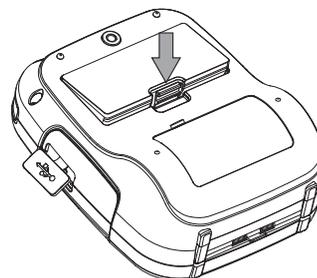


3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

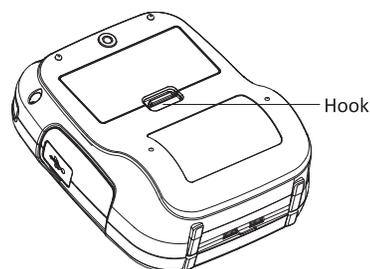

Menu Settings

1. Press and hold MODE button for approx. 2 seconds, and printer is turned on. LCD display is shown as follows.

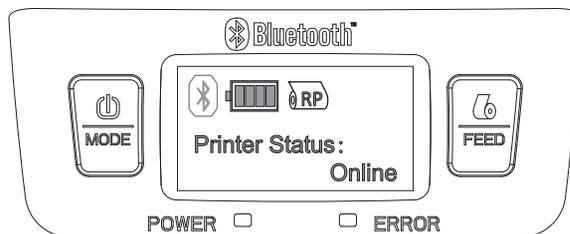

2. Press and hold MODE & FEED buttons, release the buttons after you surely confirm the screen display "Enter Menu Mode", to get a printer into the setting mode.

3. Press the MODE button, choose the item or return to previous menu.

4. Press the FEED button, you can move the cursor (" _ ") or confirm the new setting.

⚠ Note

- ◆ Before changing the menu setting, please make sure that the communication with a host device is disconnected.
- ◆ When the printer is under the Bluetooth communication with a host device, it cannot enter the Menu Setting mode.